

ServoLite Connection Diagram.

©www.bluewaveinfotech.com

ServoLite Pin Description.

Connector	Pin Number	Detail
INPUT	1(Square Pad)	R phase input
INPUT	2	Y phase input
INPUT	3	B phase input
INPUT	4	Neutral
Connector	Pin Number	Detail
OUTPUT	1(Square Pad)	R phase output
OUTPUT	2	Y phase output
OUTPUT	3	Y phase output
OUTPUT	4	GROUND EARTH
Connector	Pin Number	Detail
J1	1 &2	R phase ct
J1	3&4	Y phase ct
J1	5&6	B phase ct
Connector	Pin Number	Detail
OUTPUT1	1(Square Pad)	R - Forward neutral
OUTPUT1	2	R - Reverse neutral
OUTPUT1	3	Y - Forward neutral
OUTPUT1	4	Y - Reverse neutral
OUTPUT1	5	B - Forward neutral
OUTPUT1	6	B - Reverse neutral
OUTPUT1	7	contactor neutral
OUTPUT1	8	main neutral

Fuse details

FUSE	RATING	Purpose
F1	100ma	Board power
F2	1A	Drive/Contactor